

SlipAlert Inclinator Version 1

Using the old SlipAlert Inclinator

- a. Ensure that the wing nut is sufficiently tight so that the two sections can be moved relative to each other but remain where set when in use.
- b. Position the Inclinator on the slope so that it lies up/down the slope with the wing nut nearest the top of the slope.
- c. Adjust the level so that the bubble is exactly in the centre. Read off the setting number and the angle from the two scales.
- d. Position the SlipAlert ramp on the slope and pointing directly down the slope.
- e. Pull SlipAlert up to the top of the ramp but instead of letting go when the green light indicates, allow SlipAlert to slowly roll down the ramp until the setting number is indicated on the digital display. Briefly halt SlipAlert at this position before letting it go as normal.